


Parts Manual for

SNAPPER®

POWERAKE® II

MODEL NUMBER:

PR3001

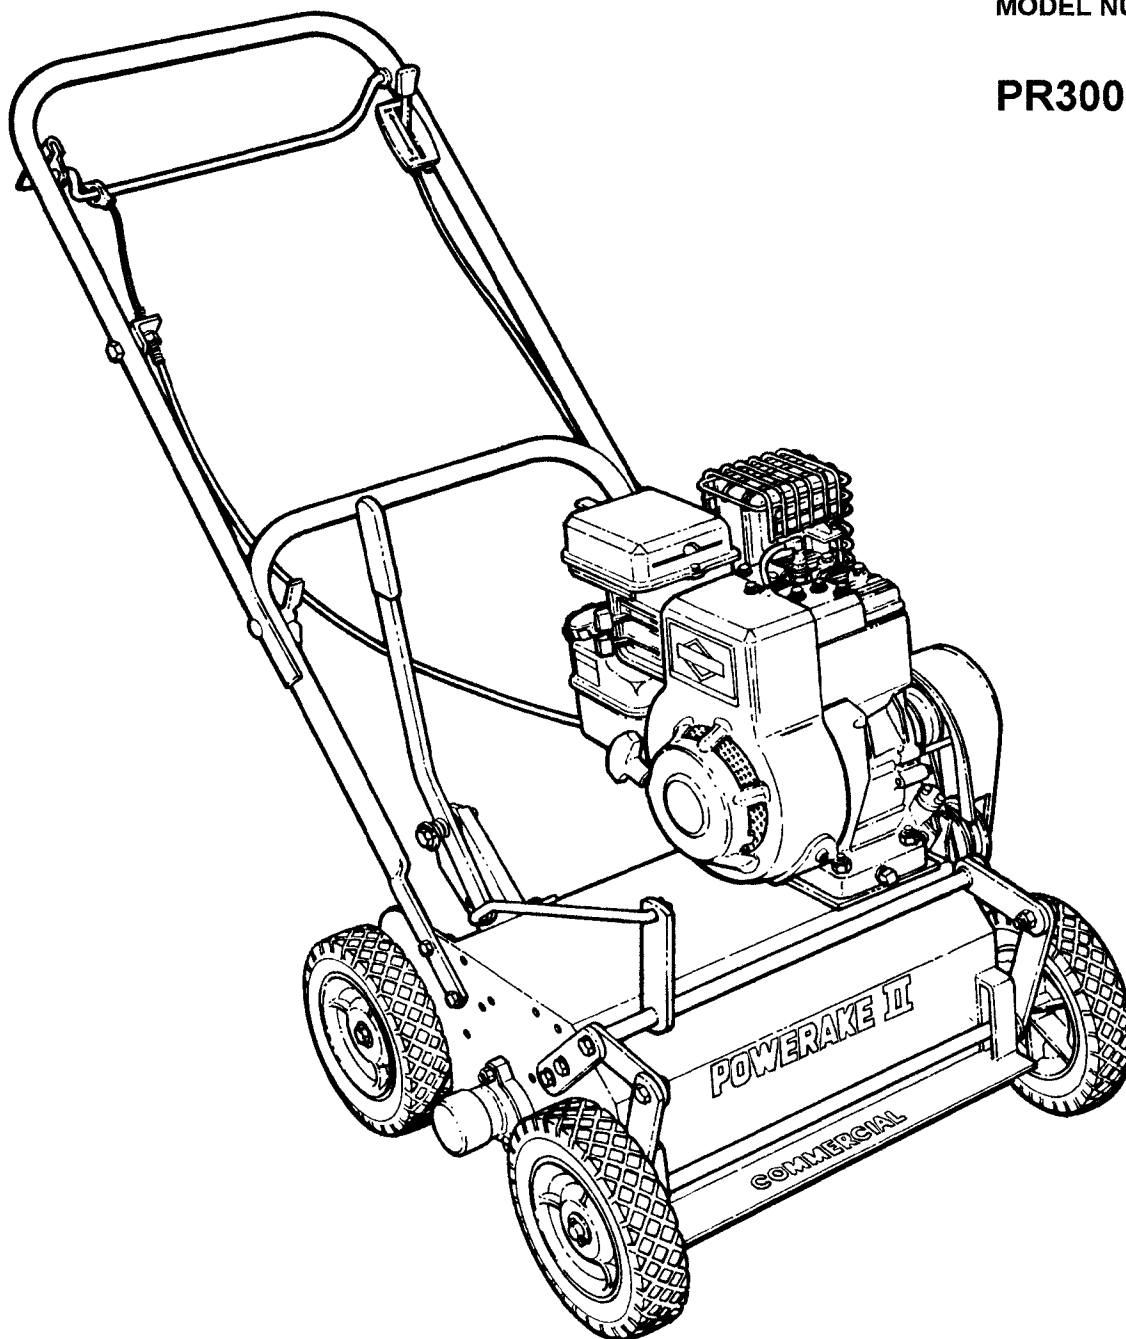


SNAPPER® McDonough, GA., 30253 U.S.A.

COPYRIGHT © 1997
SNAPPER INC.
ALL RIGHTS RESERVED


(Rev. 1, 11/97) MANUAL No. 06320

HANDLE ASSEMBLY

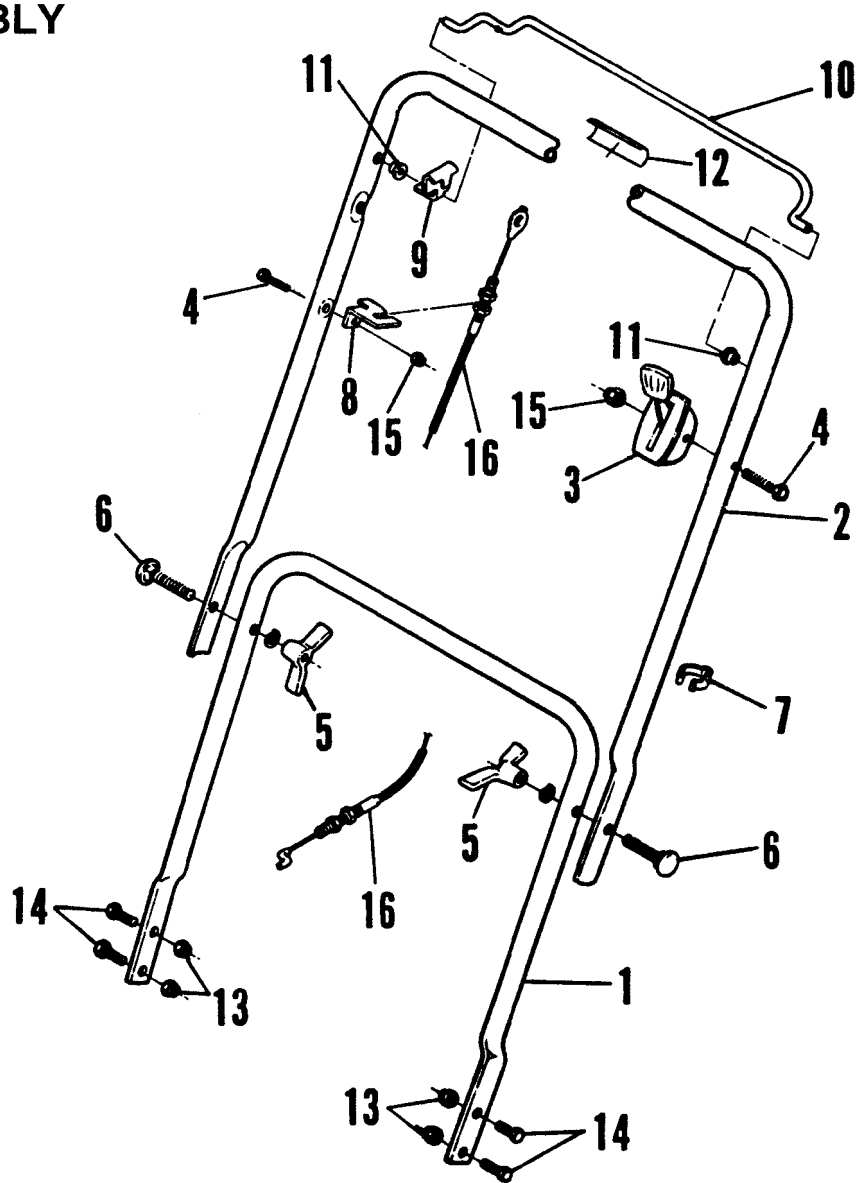

ITEM	PART NO.	DESCRIPTION
1	7-6112	LOWER HANDLE
2	3-8460	UPPER HANDLE
3	7-6065	CONTROL, Throttle
4	9-0639	SCREW, 1/4-20 x 1-1/2" Hex Head Cap, Grade 5 (2)
5	7-6132	KNOB (2)
6	9-0760	BOLT, 5/16-18 x 2" Round Head Square Neck, Grade 5 (2)
7	7-6223	CABLE CLIP, 7/8"
8	3-2816	MOUNT, Cable
9	3-2593	CATCH, Bail
10	1-9210	BAIL
11	1-5601	BUSHING, 5/16" I.D. (2)
12	2-3705	DECAL, Clutch Control
13	7-6979	NUT, 3/8-16 Hex Nyloc (4)
14	9-0563	SCREW, 3/8-16 x 1" Hex Head Cap, Grade 5 (4)
15	7-6978	NUT, 1/4-20 Hex Nyloc (2)
16	2-3704	CABLE, Drive 66.5"


HEIGHT ADJUSTMENT ASSEMBLY

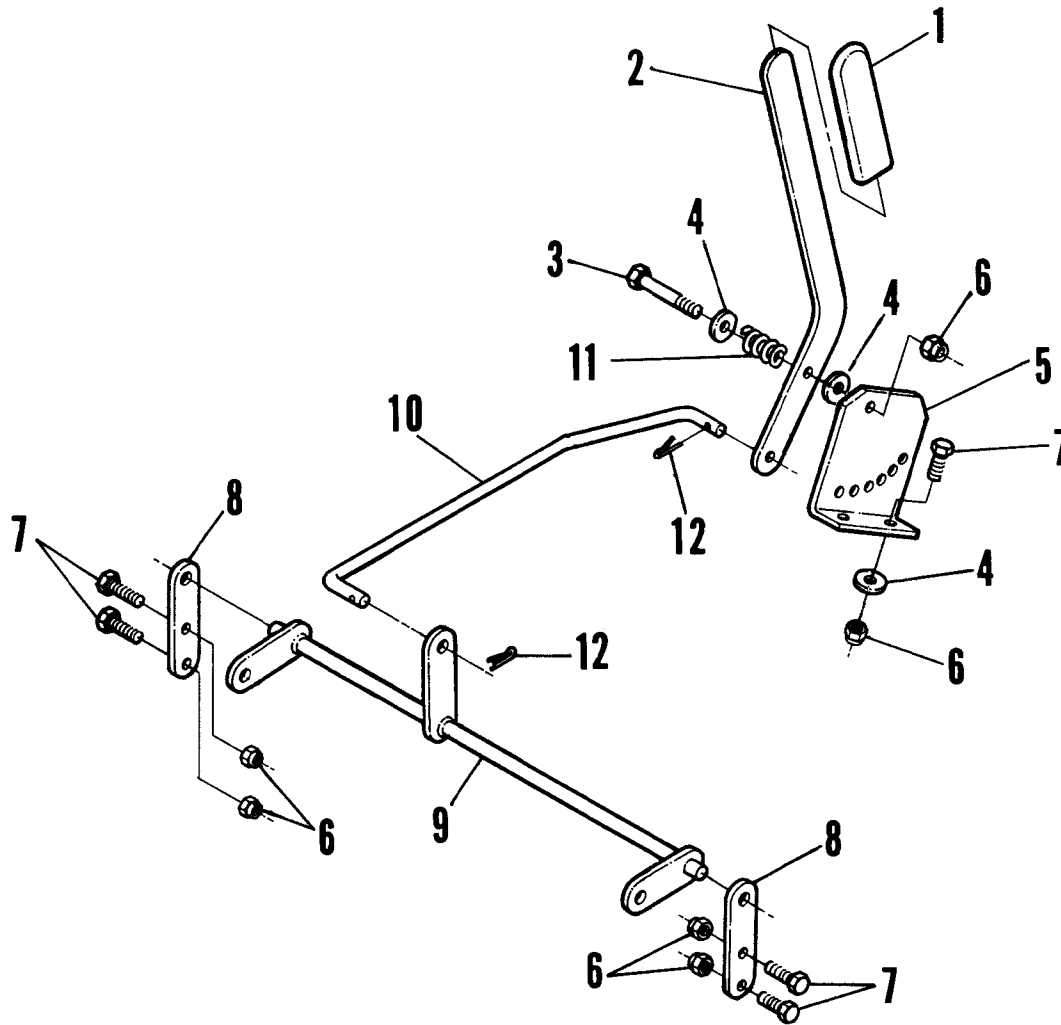

ITEM	PART NO.	DESCRIPTION
1	7-6526	GRIP
2	7-7083	ADJUSTMENT LEVER w/Grip
3	9-0588	SCREW, 3/8-16 x 2" Hex Head Cap, Grade 5
4	9-0517	WASHER, 3/8" Standard Flat (4)
5	7-6121	GAUGE, Adjustment
6	7-6979	NUT, 3/8-16 Hex Nyloc (9)
7	9-0563	SCREW, 3/8-16 x 1" Hex Head Cap, Grade 5 (4)
8	7-6111	PIVOT ARM (2)
9	7-6102	ARMS, Height Adjustment (Weldment)
10	7-6120	ARM, Linkage
11	7-6438	SPRING, Compression
12	9-0365	PIN, 1/8 x 3/4" Cotter (2)

(Rev. 1, 11/97) MANUAL No. 06320

MAIN DECK ASSEMBLY

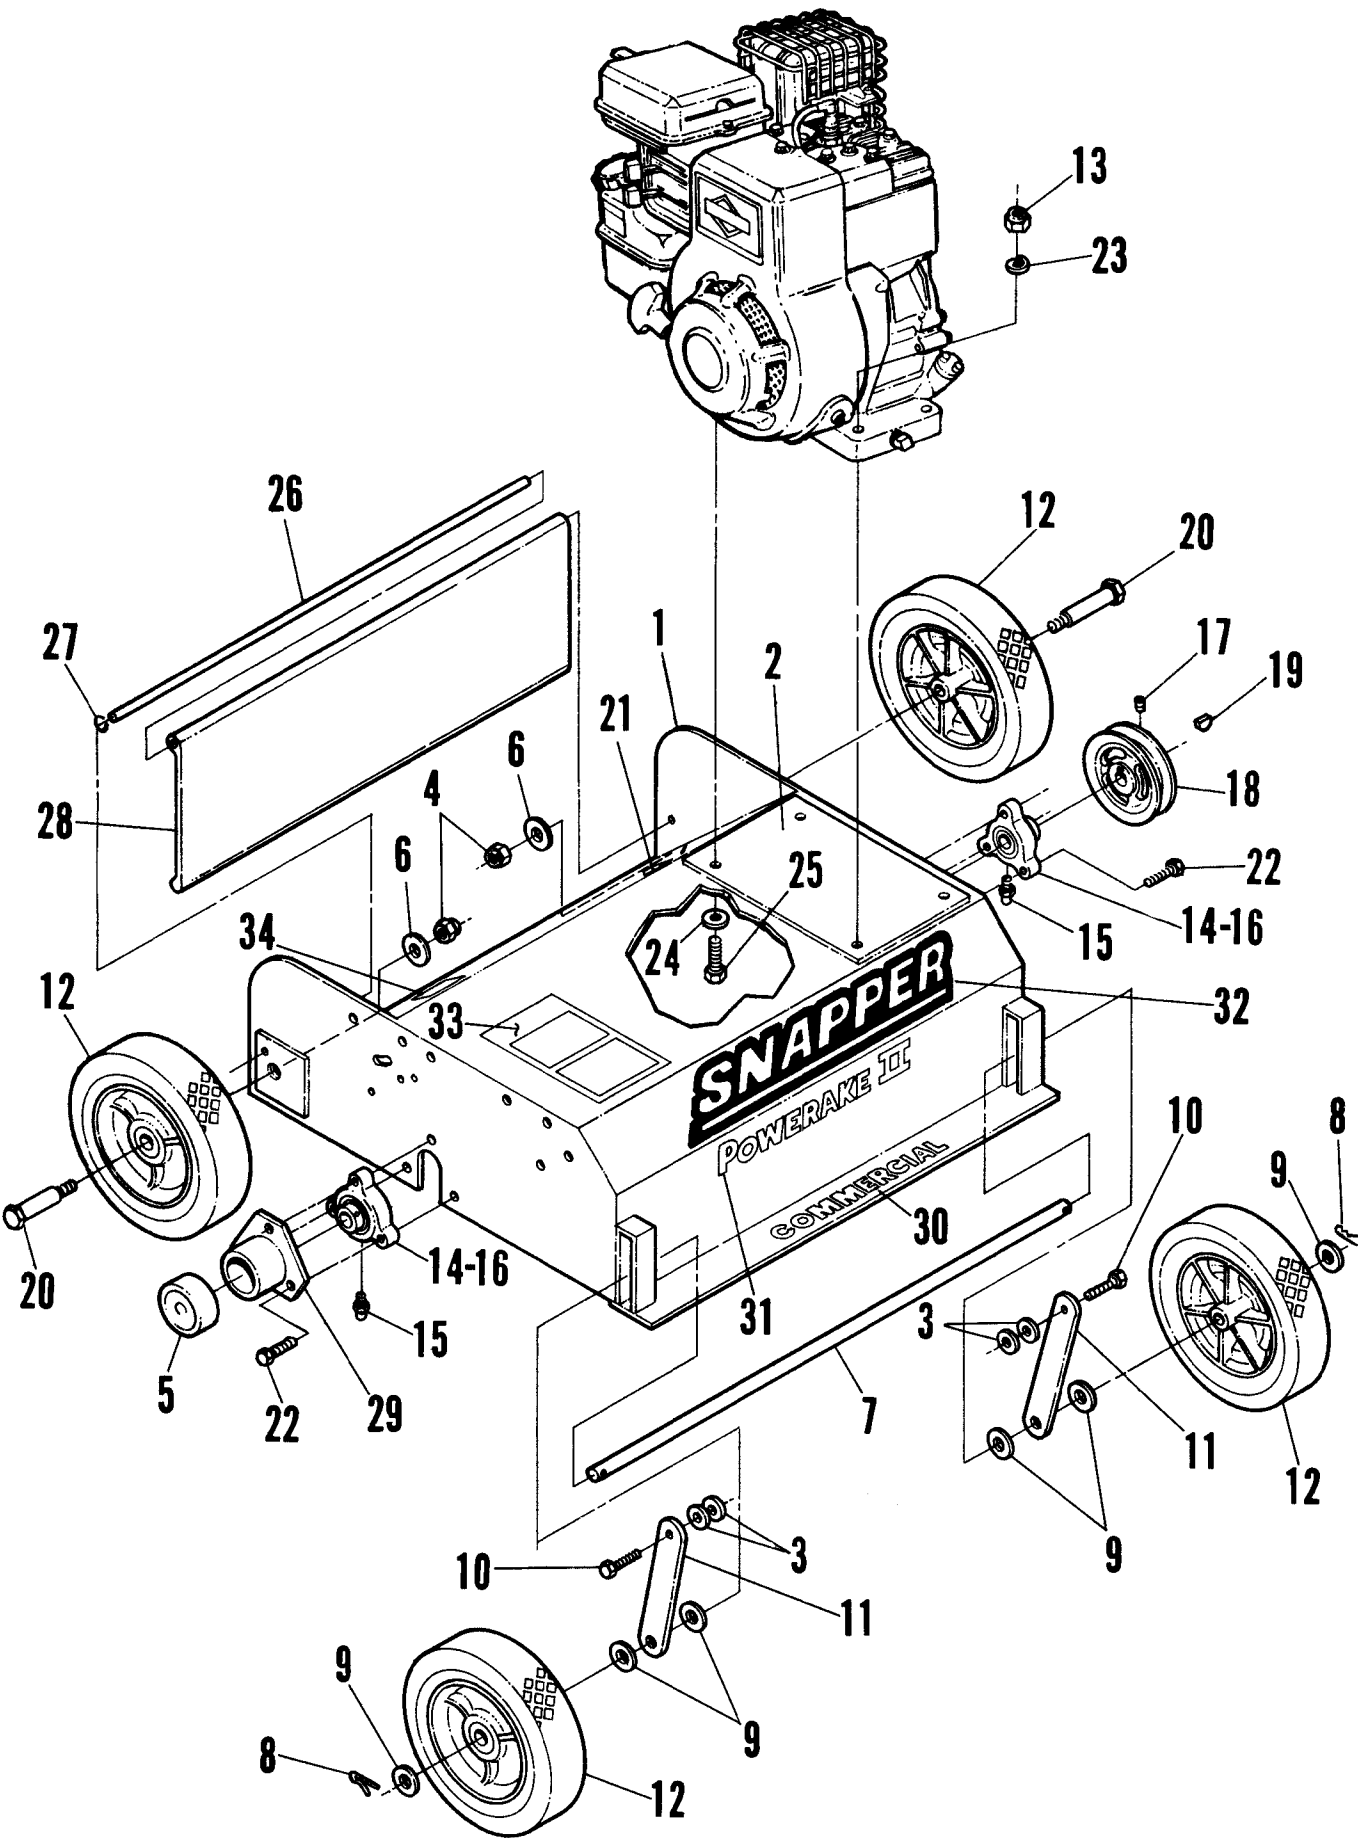


MAIN DECK ASSEMBLY

ITEM	PART NO.	DESCRIPTION
1	7-7091	BODY w/Decals
2	7-6070	ENGINE PAD
3	9-0517	WASHER, 3/8" Standard Flat (4)
4	7-6979	NUT, 3/8-16 Hex Nyloc (2)
5	7-6124	CAP, Shaft Guard
6	9-0250	WASHER, 1/2" Flat (2)
7	7-6113	AXLE, Front
8	9-0365	PIN, 1/8 x 3/4" Cotter (2)
9	9-0550	WASHER, 1/2" Standard Flat (6)
10	7-6927	SCREW, 3/8-16 x 1-1/4" Hex Head Cap, Grade 2 (2)
11	7-6114	LIFT ARM (2)
12	7-6133	WHEEL, 8" (4)
--	7-7084	STEEL WHEEL (Optional)
13	9-0717	NUT, 5/16-18 Hex Nyloc (10)
14	7-6072	BEARING, Cast Iron Flange (2)
15	7-6998	FITTING, 1/4-20 Grease (2)
16	7-7679	SCREW, #10-32 x 1/4" Knurled Cup Point Set (4)
17	7-6956	SCREW, 5/16-18 x 3/8" Knurled Cup Point Set
18	7-7085	PULLEY, w/Set Screw (7-6956)
19	1-0211	KEY, #9/606 Woodruff
20	7-6259	BOLT, Axle (2)
21	1-3010	DECAL, Warning
22	7-6948	BOLT, 5/16-18 x 1-1/4" Hex Head Tap (6)
23	9-0187	WASHER, 5/16" Split Lock (4)
24	9-0692	WASHER, 5/16" Standard Flat (8)
25	9-0669	SCREW, 5/16-18 x 1-3/4" Hex Head Cap, Grade 5 (4)
26	7-6109	ROD, Deflector
27	7-6961	RING, 5/16" Retaining (2)
28	7-6110	DEFLECTOR
29	7-6103	GUARD, Shaft
30	7-6682	DECAL, Commercial
31	7-6135	DECAL, Powerake II
32	1-9249	DECAL, Snapper
33	7-7950	DECAL, Instructions
34	7-7750	DECAL, Caution


(Rev. 1, 11/97) MANUAL No. 06320

DRIVE ASSEMBLY

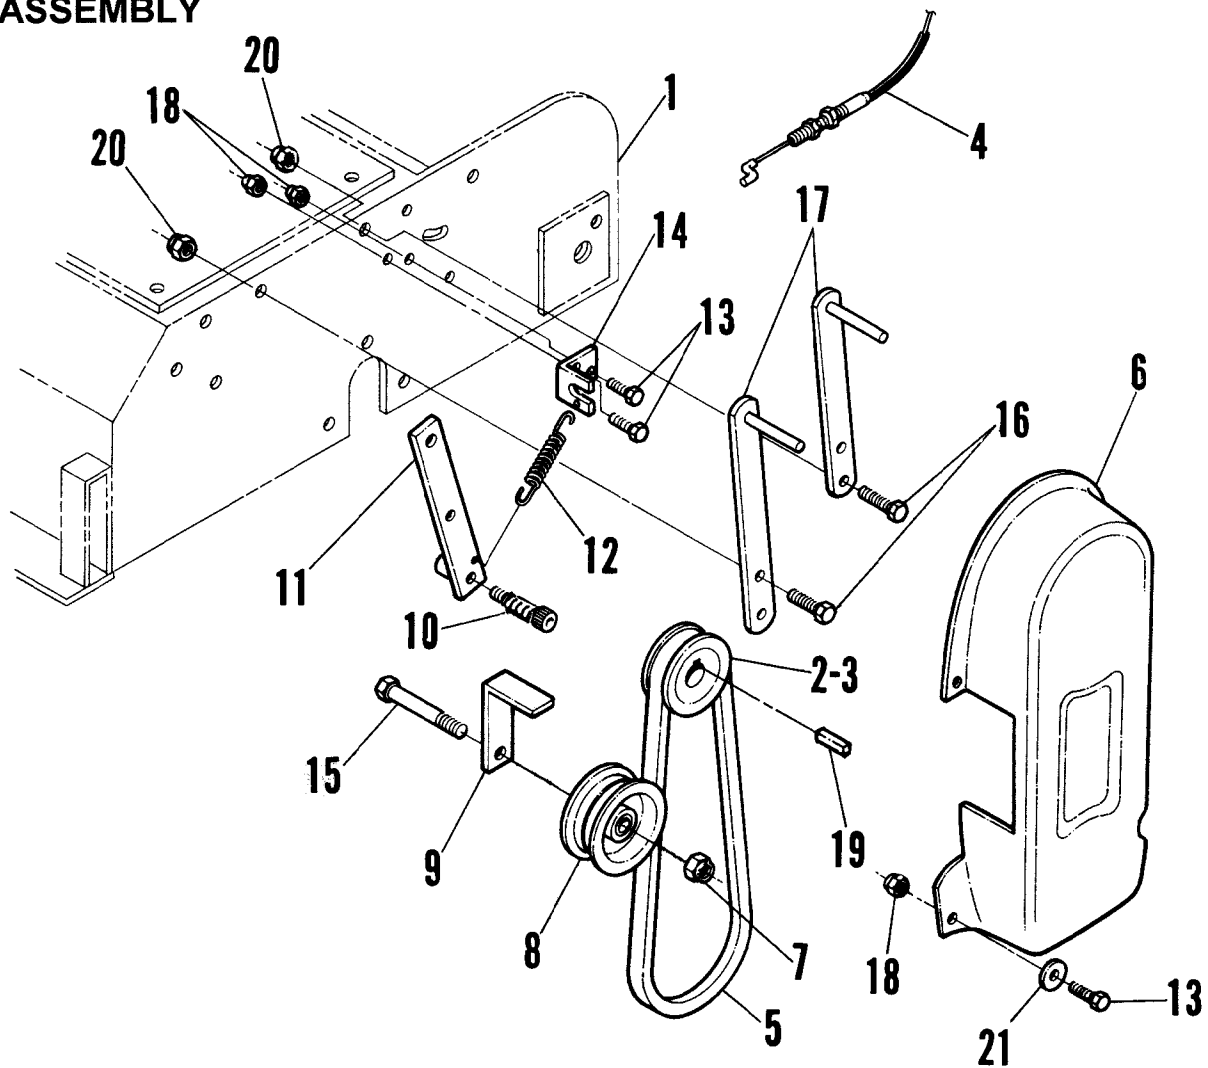

ITEM	PART NO.	DESCRIPTION
1	7-7091	BODY w/Decals
2	7-6107	DRIVE PULLEY w/Set Screws
3	7-6956	SET SCREW, 5/16-18 x 3/8" Knurled Point
4	2-3704	CABLE, Drive
5	7-6145	DRIVE BELT
6	7-6140	SHIELD, Belt
7	7-6979	NUT, 3/8-16 Hex Nyloc
8	7-6847	PULLEY, Idler
9	7-6146	BELT SNUBBER
10	7-7001	SHOULDER BOLT, Socket Head
11	7-6104	IDLER ARM
12	7-6564	IDLER SPRING
13	9-0072	SCREW, 1/4-20 x 5/8" Hex Head Cap, Grade 5 (6)
14	7-6138	BRACKET
15	9-0588	SCREW, 3/8-16 x 2" Hex Head Cap, Grade 5
16	9-0206	SCREW, 5/16-18 x 3/4" Hex Head Cap, Grade 2 (2)
17	7-6105	BELT GUIDE (2)
18	7-6978	NUT, 1/4-20 Hex Nyloc (6)
19	7-6990	MACHINE KEY, 3/16" Square x 1-3/4"
20	9-0717	NUT, 5/16-18 Hex Nyloc (3)
21	9-0598	WASHER, 1/4" Flat

RAKING SHAFT ASSEMBLY

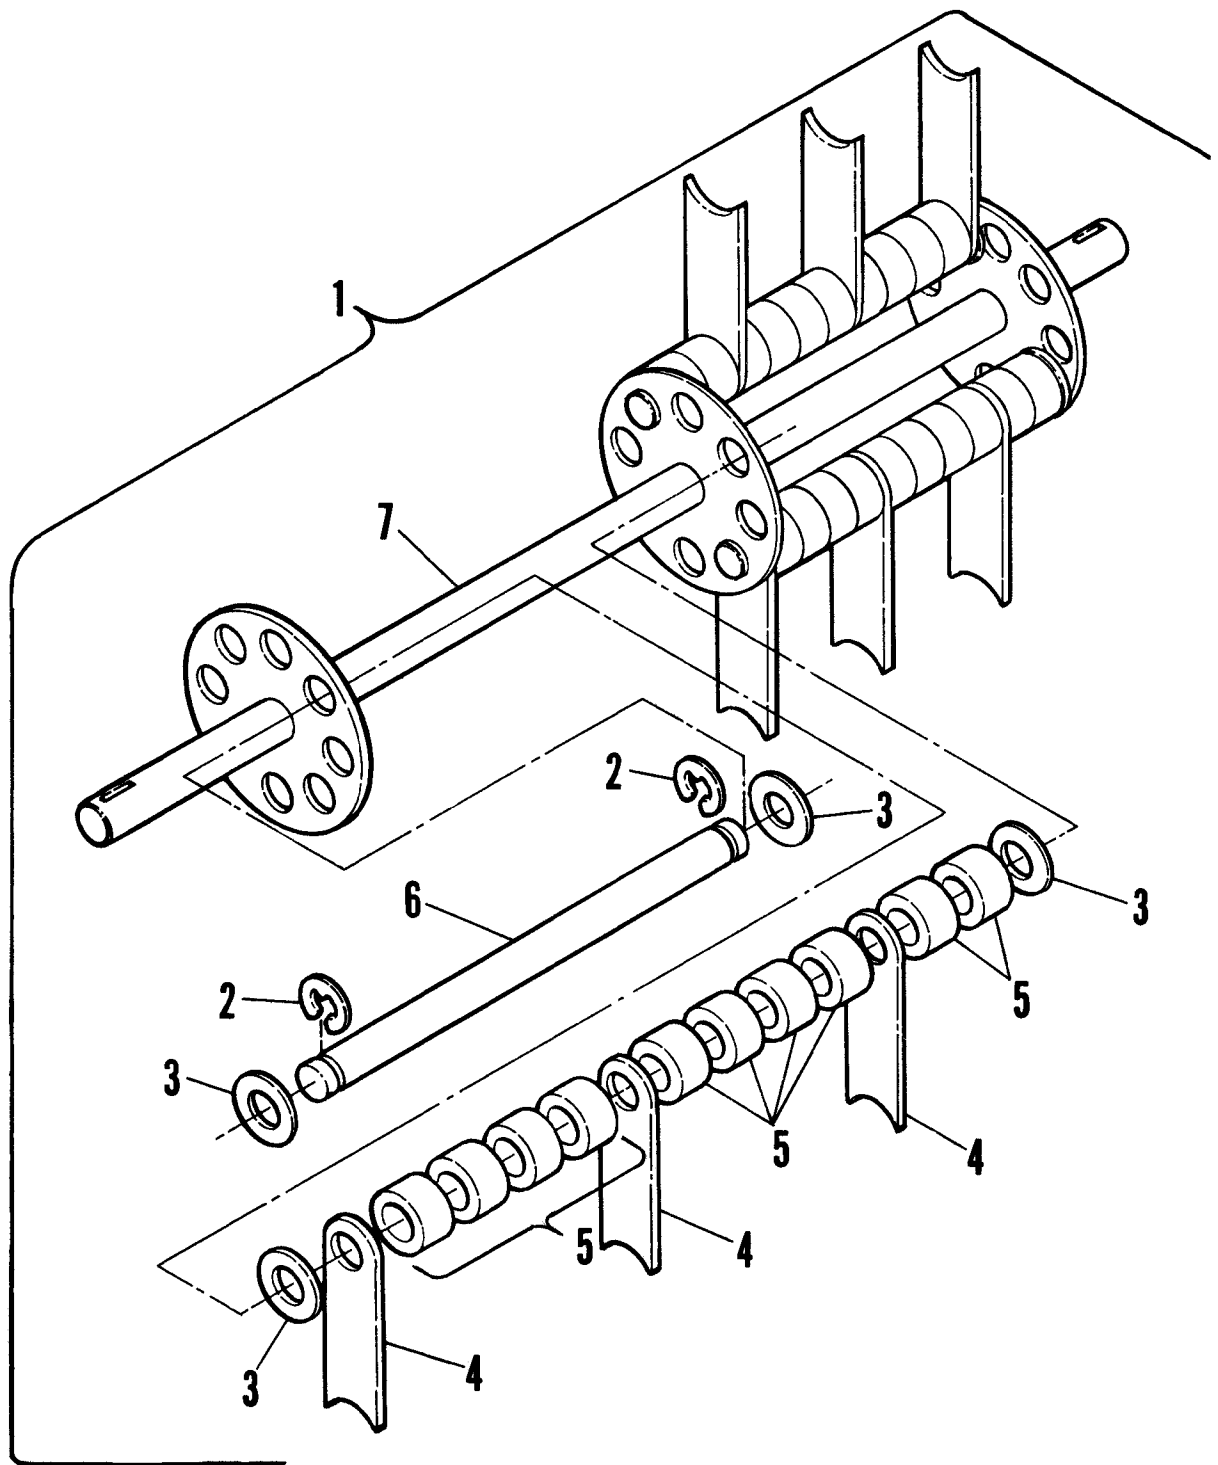


ITEM	PART NO.	DESCRIPTION
1	6-0813	RAKING SHAFT, COMPLETE (1)
2	1-4341	SNAP RING (8)
3	7-6126	MAIN SHAFT WASHER (16)
4	7-6118	FINGER (12)
5	7-6062	SPACER (40)
6	7-6119	SATELLITE SHAFT (4)
7	7-6101	MAIN SHAFT (1)

PARTS MANUAL FOR

SNAPPER®

POWERAKE II
MODEL:
PR3001

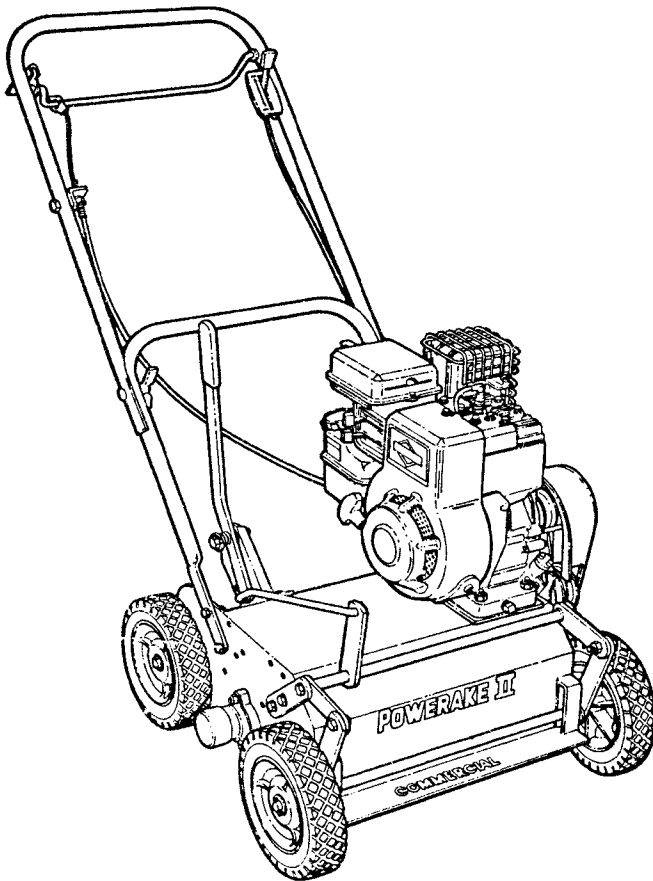

IT IS THE POLICY OF SNAPPER TO IMPROVE ITS PRODUCTS WHENEVER IT IS POSSIBLE AND PRACTICAL TO DO SO. WE RESERVE THE RIGHT TO MAKE CHANGES OR ADD IMPROVEMENTS AT ANY TIME WITHOUT INCURRING ANY OBLIGATION TO MAKE SUCH CHANGES ON PRODUCTS MANUFACTURED PREVIOUSLY.

SNAPPER® McDonough, GA., 30253 U.S.A.